

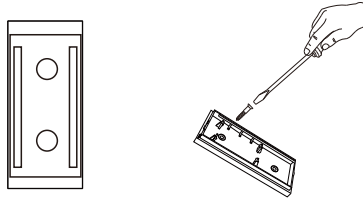 
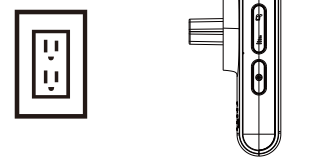 
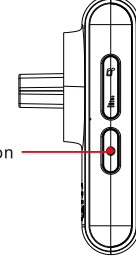 
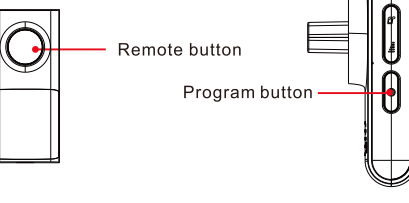 


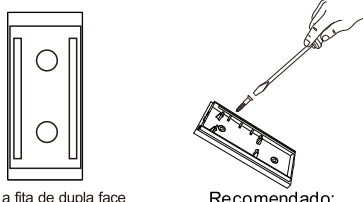 
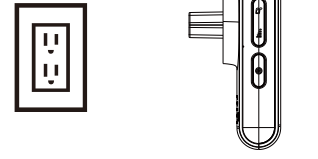 
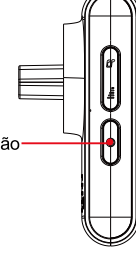 
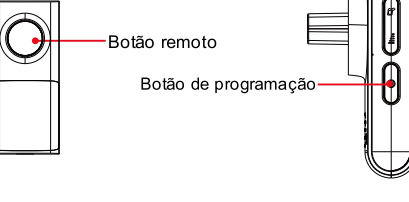 


<p><b>electra e<sup>®</sup></b> light your business</p> <p>Manual of e25.N Wireless Doorbell</p> <p>CE RoHS  </p> <p>Please read manual carefully before using</p> <p>1</p>	<p>Thanks for buying this door bell</p> <p>The main advantages of this product are as below:</p> <ol style="list-style-type: none"> <li>1.Transmitter with Button Battery</li> <li>2.Coding Free</li> <li>3.Easy usage</li> <li>4.Easy Instalstion</li> <li>5.36Chime tone</li> <li>6.500ft working distance</li> <li>7.3 Level of ring volume(H-M-L)</li> <li>8.IP55 waterproof class for transmitter</li> </ol> <p>2</p>	<p>Installation:</p>  <p>1.Use the double-sided adhesive stick to the wall (flat surface recommended) Note:Clean the surface before installing.</p> <p><b>Recommended:</b> 2.Dig a small hole on the wall &amp; fix with screws</p>  <p>3.Plug the Receiver into a regular socket within the operating range.</p> <p>3</p>	<p>How to erase the program</p>  <p>Program button</p> <ol style="list-style-type: none"> <li>1. Push and hold the program button on the chime for about 10 seconds ( Make sure it's connected with AC power )</li> <li>2. when the chime rings, the program have been successfully erased.</li> </ol> <p>4</p>	<p>Doorbell is well-pared&amp;ready for using:</p>  <p>Remote button</p> <p>Program button</p> <p><b>How to reprogram/add chime</b></p> <ol style="list-style-type: none"> <li>1. Erasing the program memory in the new chime first.</li> <li>2. Push &amp; hold the Program button on the Chime for about 3-5 seconds then push the remote button twice within 5 seconds. when the chime rings, it's successfully programmed with the remote.</li> <li>3.Test the chime to make sure it's programmed.</li> </ol> <p>5</p>	<p><b>Cautions:</b></p> <ul style="list-style-type: none"> <li>◆ Please do not open PCB or repair it without professional guide in order to avoid breakdown of components</li> <li>◆ Please make sure it is not exposed to the sun and rain for a long time or closed to the metallic object</li> <li>◆ Operating range may be affected by environmental factors and interference sources nearby.</li> <li>◆ Proper use will prolong life span of wireless doorbell effectively.</li> </ul> <p><b>Technical Specifications:</b></p> <ul style="list-style-type: none"> <li>◆ Receiver Rated voltage: AC 220V</li> <li>◆ Receiver Standby current: &lt;5mA</li> <li>◆ Receiving sensitivity: -107dBm</li> <li>◆ Power Consumption of transmitter : &lt;10mw</li> </ul> <p>6</p>	<p><b>Warranty :</b></p> <p>We provide 24 month warranty against any manufacturing defect from the date of your original purchase.</p> <p><b>electra e<sup>®</sup></b> light your business</p> <p>7</p>
<p><b>electra e<sup>®</sup></b> light your business</p> <p>Manual Campainha sem fios e25.N</p> <p>CE RoHS  </p> <p>Por favor leia o manual antes de usar</p> <p>1</p>	<p>Obrigado por comprar a campainha sem fios e25.N</p> <p>As principais vantagens deste produto são:</p> <ol style="list-style-type: none"> <li>1.Botão transmissor com bateria</li> <li>2.Codificação livre</li> <li>3.Fácil utilização</li> <li>4.Fácil instalação</li> <li>5.36 toques diferentes</li> <li>6.Alcance aproximado 150 Metros</li> <li>7.3 níveis de volume (H-M-L)</li> <li>8.Botão IP55</li> </ol> <p>2</p>	<p>Instalação:</p>  <p>1.Utilize a fita de dupla face (superfície plana recomendada) Nota: Limpe a superfície antes de instalar</p> <p><b>Recomendado:</b> 2. Efetuar um pequeno orifício na parede e fixar com parafusos</p>  <p>3. Ligue o recetor a uma tomada dentro da distancia recomendada</p> <p>3</p>	<p>Botão de programação</p>  <p>1.Mantenha pressionado o botão de programação durante 10 segundos (Certifique-se que o recetor esta ligado a corrente)</p> <p>2. Quando a campainha tocar, o programa foi apagado com</p> <p>4</p>	<p>A campainha está preparada e pronta para usar:</p>  <p>Botão remoto</p> <p>Botão de programação</p> <p>Como reprogramar / adicionar campainha</p> <ol style="list-style-type: none"> <li>1.Apagar a memória do programa da nova campainha</li> <li>2.Mantenha pressionado o botão do programa na campainha cerca de 3-5 segundos e pressione o botão remoto duas vezes no espaço de 15 segundos. Quando a campainha tocar significa que esta emparelhada com o botão remoto.</li> <li>3.Teste a campainha para se certificar de que está programada</li> </ol> <p>5</p>	<p><b>Precauções:</b></p> <ul style="list-style-type: none"> <li>◆ Por favor, não abra a PCB ou tente reparar-a sem a ajuda de um profissional para evitar a quebra de componentes</li> <li>◆ Certifique-se de que não está exposto ao sol e chuva por um longo período de tempo ou fechado dentro de um componente metálico</li> <li>◆ O alcance pode ser afetado por fatores ambientais e fontes de interferência nas proximidades</li> <li>◆ O uso adequado prolongará a vida útil da campainha sem fios</li> </ul> <p><b>Especificações técnicas:</b></p> <ul style="list-style-type: none"> <li>◆ Tensão de alimentação: AC 220V</li> <li>◆ Consumo em stand by do recetor: &lt; 5mA</li> <li>◆ Sensibilidade: - 107dBm</li> <li>◆ Consumo do transmissor: &lt; 10mA</li> </ul> <p>6</p>	<p><b>Garantia</b></p> <p>Nós fornecemos garantia de 24 meses a partir da data da sua compra original. Contra qualquer defeito de fabrico</p> <p><b>electra e<sup>®</sup></b> light your business</p> <p>7</p>